



User Manual

**kidi joy, kidi hero, kidi zoom, champion, my kidi, hello
kidi ,kidi day, sweet, star 10, call 5.2, vibe, touch 5.1**

*The images in the instruction booklet are for illustration only — changes may occur

The steps on the page attached to the package must be performed:



KIDIWATCH Device operating instructions

Right side of the watch:

Upper right – **Flashlight / Scroll Wheel**

For watches with a scroll wheel: the scroll button is located at the upper right. (champion, my kidi, hello kidi, kidi day, sweet, star 10, call 5.2, vibe, touch 5.1)
Rolling the button up or down allows you to navigate through the menu.

Lower right – **Power / SOS Button**

The power button turns on the watch. A short press "wakes" the watch screen from sleep mode.
This button also serves as the watch's **SOS / emergency button**.

A long press will call the emergency contacts set in the watch and send a notification to the app with the time and location.

Lower left side of the watch:

SIM card slot: Avoid removing the SIM card to prevent damage to the card reader and maintain the watch's water resistance.

Upper left side of the watch:

Charging port: Open the cover and insert the charger.

Back of the watch:

Sticker with watch information, including a scannable illustration, REG CODE (registration code for the app), and the watch's IMEI number.



Watch Screen:


Home screen. On the screen you can see:

By clicking on the screen, a variety of background options will be displayed to choose from.

You must choose your favorite background.

Each background displays the following on the screen:

- Time
- Day of the week
- Date
- Heart icon showing the number of hearts sent to the child from the app.
- At the top of the screen: the watch camera lens.
- At the bottom of the screen: a circle – tapping it at any time returns you to the previous menu.

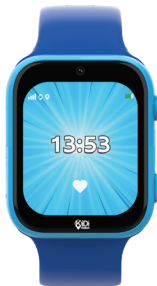

Swipe right or scroll the screen up and down to navigate between the different screens available on the watch.

Video Call: From this screen, you can make a video call via the app.
If the watch is linked to multiple participants, you can choose who to call.

Phonebook: Tap the phone icon to view contacts assigned to the watch via the app.

Swipe right or left to scroll through the contact list.

- Tap a contact to call them.
- Tap the red circular icon with a phone / the power button on the right side of the watch to end the call.

Dialer: The dialer allows you to make calls.
If you do not want to allow independent dialing, you can disable it in the app settings (explained later).

Camera: The watch has a selfie camera.

- Tap the camera icon to take a photo.
- Tap the circular photo icon on the left to view the last photo taken and access the photo gallery.

QR Code: This screen displays:

- A QR code to download the app.
- The registration code for the app, in case the sticker on the back of the watch is worn out.

Call Log: This screen shows incoming calls, answered calls, and missed calls.

Messages: On this screen, you can send and receive SMS messages.

Voice Messages / Chat: This screen allows sending voice messages between the watch and the app.
Press and hold the microphone icon while speaking, then release when done to record and send the message.



Album: Tapping the screen will open the gallery of photos taken with the camera:

- Tapping a photo will display it on the screen.
- Swipe right/left to move between photos.
- Tapping the trash can icon will delete the photo.

Settings: In this screen, you can perform various device actions.

Note that some settings are already fixed and it is recommended not to change them. You can also change the watch language and turn it off.

Alarm Clock: You can see the times set through the app when the alarm will go off.

Flashlight: Located on the right side of the watch. In this screen, you can turn it on or off. It is recommended not to point it at the eyes.

Stopwatch: You can operate a stopwatch through the watch.

Calculator: You can use the calculator through the watch.


Math Game: In this screen, a game will appear for practicing addition and subtraction. On the top right, a settings gear icon will appear; tapping it opens a screen where you can set the game level – Easy / Medium / Hard. Tapping "Start" will begin a new game. You should select True/False for the exercise displayed on the screen.

Instructions to Activate the App

The app menu allows you to control the watch settings, track your child's location, receive notifications, text messages, SOS mode in emergencies, view location history, safe zones, and more.

Synchronization with the app is only possible when the watch is turned on, within network coverage, and if an active internet and cellular plan is in place.

Note: You must purchase a service plan at www.kidiwatch.co.il/sim to use the app and access its features, including making calls and sending messages.

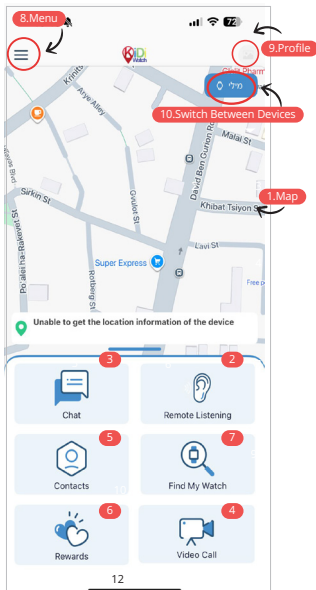

1. MAP

On the map screen we can see the location of the clock at any given time


This model supports cellular tracking LBS (without GPS)

In this mode, the location will depend on the local cellular antenna positions, which may result in some deviation and inaccuracy for various location-related functions such as location tracking, maps, location history, and more.

Additional data on this screen:

- Date and time of the last recorded location from the watch, plus the watch's battery percentage.
- If multiple watches are registered, you can view them all together or focus on a specific watch on the map.

-  Clicking the icon will display the parent's location.
-  Clicking the icon will display a map where all the watches can be seen simultaneously.
-  Clicking the icon will display map view options to see all the watches at the same time.
-  Clicking on the icon will allow you to define a security zone with a radius of 200 meters
 - If the child leaves the defined range, an alert will be sent to the app.
 - You can define 3 security zones and activate/deactivate a zone accordingly.
-  Clicking the icon will refresh the map.
-  Clicking the icon will display the watch's location history.

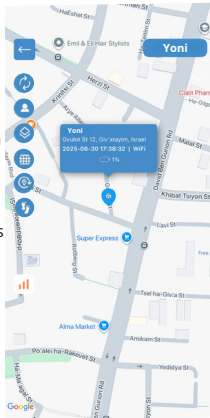

2. Remote listening

- On this screen, you can send a command to the watch to remotely listen to the environment the child without his knowledge or the knowledge of those around him. The parent must dial the phone number he wishes to listen to (not the watch's number). When the command is successfully sent, the watch will dial the number dialed without being able to identify it on the watch. When answering the call, it will be possible to enter the child's environment. Listening call minutes are counted against the watch's call minutes.

3. Chat


- On this screen you can send voice messages between the watch and the app.
- Speak while pressing and holding the microphone icon and leaving after the recording is finished.

4. Video call

On this screen, you can make a video call to the app.
If the watch is associated with multiple participants, you can choose who you want to have the video call with.

5. Contacts

On this screen you can set up the contacts for the watch.
After defining the contacts, it will be possible to call the defined people from the watch. Likewise, the defined contacts will be able to call the watch and only them. Any call to the watch from an undefined number will be blocked. Dialing the watch is done normally without the need for the app.

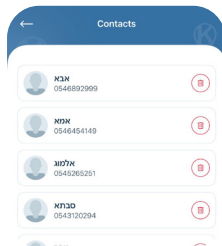


6. Sending hearts/awards 🏆

- On this screen, you can send "hearts" to the child as positive reinforcement.
- The number of hearts is displayed on the clock screen.

7. Find a watch 📱

- If the watch is lost, you can activate this option to help find it.
- When sending the command, the watch will ring until it is found.
- Will work like all other commands only when the watch is on.

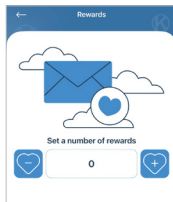

8. Menu

All settings for the watch will be made on this screen. The settings are sent as a command to the watch from the app and can be changed and/or updated at any time.

Emergency/Family Numbers: SOS

This screen will set the emergency phone numbers for the watch/child.

Up to three numbers can be set.


When pressing the panic button / SOS button the entered numbers will be circularly dialed.

At the same time, a notification will be sent to the app that the child pressed the distress button, including the child's location at the time the button was pressed.

Photo capture:

On this screen, you can send a command to take a remote photo. After successfully sending the command, a snapshot will be taken on the watch's camera without the knowledge of the child or anyone else around them (you must wait a while until the photo is received or the screen is refreshed).

The image will be received in the app with the label "Remote Photo".

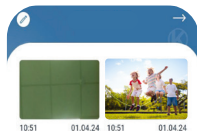

School Time:

-This screen will define time periods in which the clock will be locked.

-Locking the clock means that the child will not be able to play on the various watch screens (dial, messages, etc.)

- Also, the watch will not be able to receive calls while the watch is locked.

-However, the SOS / panic button on the watch will function normally when needed.

Additionally, remote listening will still be possible.

Alerts:

On this screen, you will receive various notifications from the app regarding the watch:

- Low battery percentage.

- Leaving the security zone.

-Update that the child pressed the distress button (SOS).



alarm clock:

- On this screen you can set an alarm to ring on the watch.

You can set up to three different times during the day.

Collect messages from the device:

Every message that sent to the watch can be seen on this screen in the app.

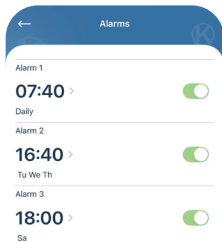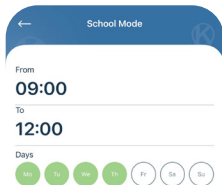

Family Members:

On this screen, you can see all family members who have linked the child's watch to their app accounts. Note that for security reasons, a watch cannot be linked to multiple app accounts unless approval is given by the first user to whom the watch was connected. If approval is granted, the user will appear on this screen.

Time Zone and Device Language:

On this screen, you can set the watch's time.

- The time zone to set is EAST GMT+2:00.
- Pay attention to the daylight saving switch: turn it on during daylight saving time and off when switching to standard time.
- Additionally, you can set the language for the watch on this screen.
- Note that you can also set the app language on the login screen for convenient use by the parent.


Settings:

All app settings can be managed on this screen.



SMS Alerts:

Various alerts from the watch are received in the app. On this screen, you can set a phone number to also receive alerts via SMS. You can choose which types of alerts you want to receive via SMS and which not.

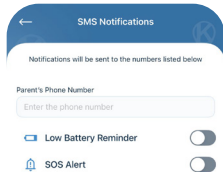

Rejected Calls List:

When the switch on this screen is turned on, only calls from numbers saved in the contacts will be allowed. Any incoming call from a number not in the contacts will appear on this screen.

Additional Settings:

On this screen, you can block the ability to use the calling function. To do this, turn off the switch button.

Server Update Frequency:

On this screen, you can change the update frequency from the device to the app. Note that the map does not show the child's movements in real-time; the location is updated according to the set update frequency.

Device Reset:

On this screen, you can reset the device from all previous settings and restore the factory settings.

After performing the reset, the device will restart, and all previously configured data will be erased.

Remote Restart:

On this screen, you can remotely turn the watch off and on.

Remote Power Off:

On this screen, you can send a command from the app to turn off the watch. The watch can only be turned on manually from the device itself.

Note: After turning off the watch, synchronization between the watch and the app will not be available.

9. Personal area

Personal details:

On this screen, you can set/change the personal details of the app owner (usually the parent).

Additionally, on this screen, you can change the password for the app.

Devices:

If there is more than one watch, you can see all the watches connected to the app here. To make settings, you must Mark the relevant clock with a V.


On this screen, you can add a new/additional watch to the app or remove a watch that is no longer in use.

On this screen, by clicking on the child's name, you can make changes to the device settings -

The child's name, the child's picture, and the family relationship.

Language:

On this screen you can change the language of the app.

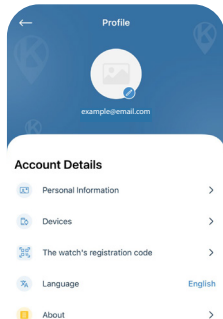



Enjoy!



Our website: www.kidiwatch.co.il
Customer Service WhatsApp: 055-3130-300

Find us!



Use of the application is conditional upon subscribing to one of the service packages on the website: www.kidiwatch.co.il/sim